

REGENCY

 
4818 | Cassini Armless Dining Chair • INSTRUCTIONS

Organize your parts.



Hardware:

C: Washer



QTY: 4

D: Washer



QTY: 4

E: Bolt



QTY: 4

F: Allen Key



Parts:

A: Seat




B: Frame (Beech)




B: Frame (Chrome/Rose Gold)



STEP 1: Remove and discard stoppers on the bottom of **Seat (A)**.

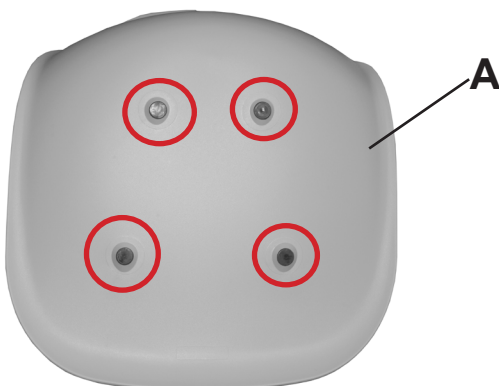

STEP 2: Attach **Frame (B)** to bottom of **Seat (A)** with **Bolts (E)** and both **Washers (C and D)**.

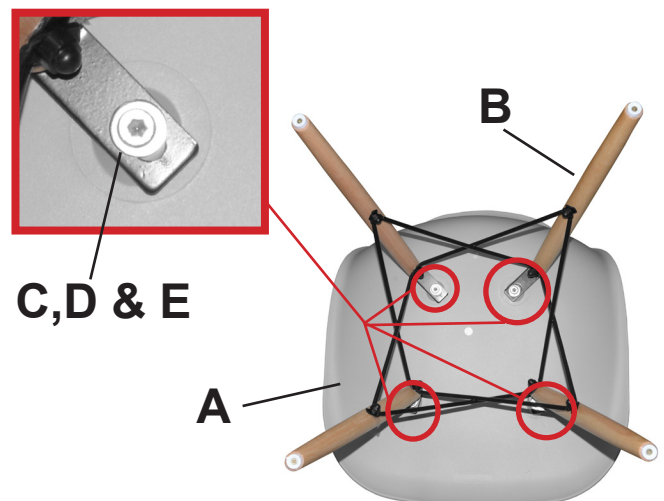

IMPORTANT NOTICE:

Place all wooden parts on a clean and smooth surface such as a rug or carpet to avoid scratching the parts. Check to be sure that you have all parts and hardware. Remove all wrapping materials, including staples & packing straps before you start to assemble. Keep all hardware parts and packaging out of reach of children.