


## BBC5236 - INSTRUCTIONS

You will need 2 person(s) for this assembly.

You will need a **Phillips Head Screw Driver** and a **Rubber Mallet** to Assemble.

### Hardware :

**A:**Cam Pins(20)• **B:**Cam Locks(20)• **C:**Dowel Rods(14)• **D:**Large Screws(9)• **E:**Small Screws(28)• **F:**Shelf Pins(16)

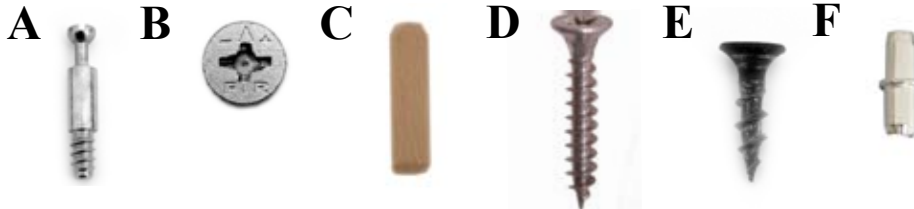


*fig.1*

-The arrow pointing toward the cam pin opening means the lock is opened.

-Turn clockwise to lock.

### Parts :


**H:**Back Panel(2)• **I:**Top• **J:** Base• **K1:**Side A(2)• **K2:**Side B(2)• **L1:**Top Runner(2)• **L2:**Bottom Runner(2)• **M:**Shelf(4)

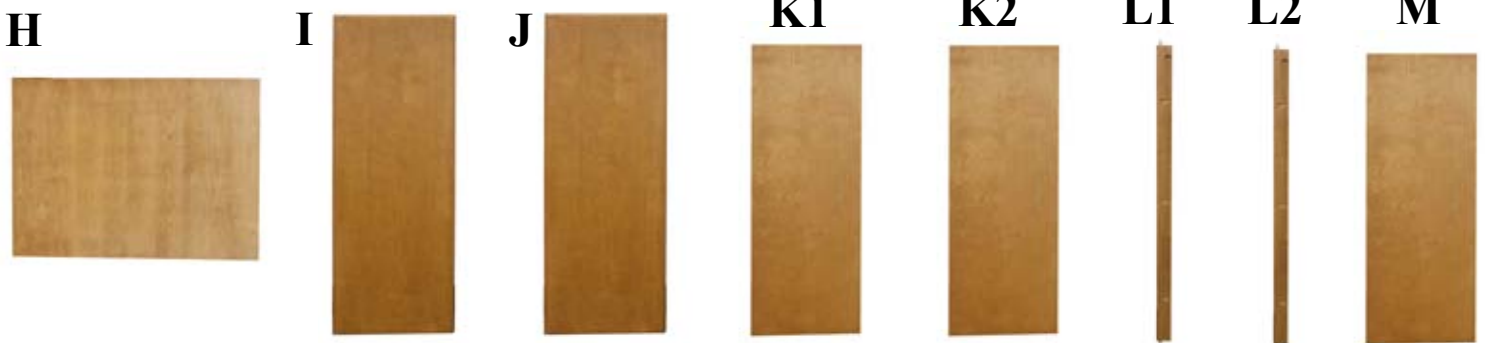

**STEP 1 :** Place 8 Cam Pins(A), 4 Cam Locks(B) and 4 Dowel Rods(C) into both Sides (K1, K2).



**STEP 2 :** Place 2 Cam Locks(B) into Top Runner(L1). Place 2 Cam Locks(B) & 2 Dowel Rods(C) into bottom Runner(L2).

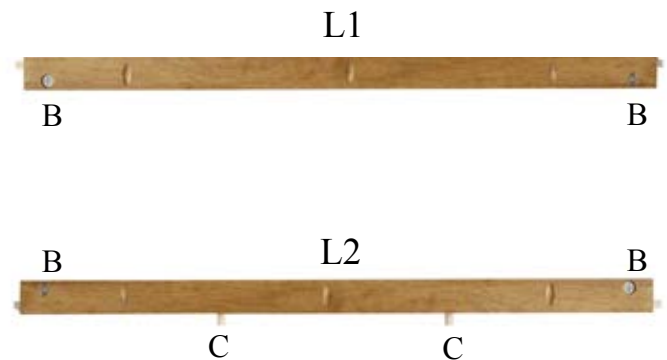

### IMPORTANT NOTICE:


- Place all wooden parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
- Check to be sure that you have all parts and hardware.
- Remove all wrapping materials, including staples & packing straps before you start to assemble.
- Do not tighten all screws/bolts until completely assembled.
- Keep all hardware parts out of reach of children.

## BBC5236 - INSTRUCTIONS

You will need 2 person(s) for this assembly.

You will need a Phillips Head Screw Driver and a Rubber Mallet to Assemble.

**STEP 3 :** Connect both Sides (K1, K2) with both Runners(L1,L2) by inserting Cam Pins into Cam Locks. Lock Cams(see fig. 1)

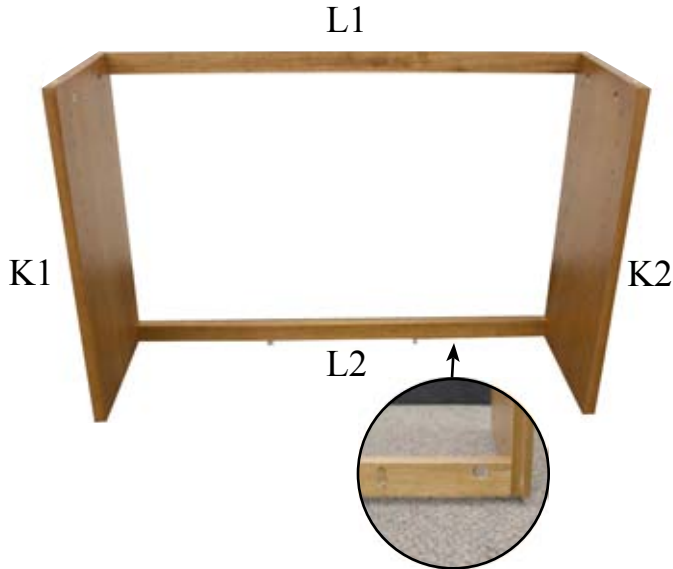


**NOTE:** Hardware on Runners(L1,L2) should face backside of bookcase.

**STEP 4 :** Insert 4 Cam Locks(B) into bottom side of Base(J).



**STEP 5 :** Attach Sides & Runner to Base(J) by inserting Cam Pins into Cam Locks and Dowel Rods into coordinating positions.

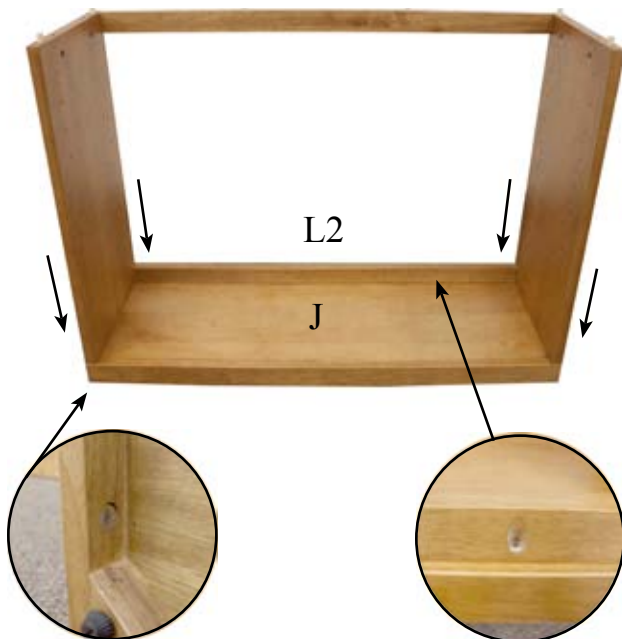


**NOTE:** Secure by locking cams(fig. 1) on bottom side of Base(J).

**NOTE:** Secure Runner(L2) to Base(J) with 3 Large Screws(D).

**STEP 6A :** Repeat STEPS 1-3

**STEP 6B :** Stack second set of Sides & Runners to existing Sides & Runner Base by inserting Cam Pins into Cam Locks and Dowel Rods into coordinating positions. Lock Cams(see fig.1).

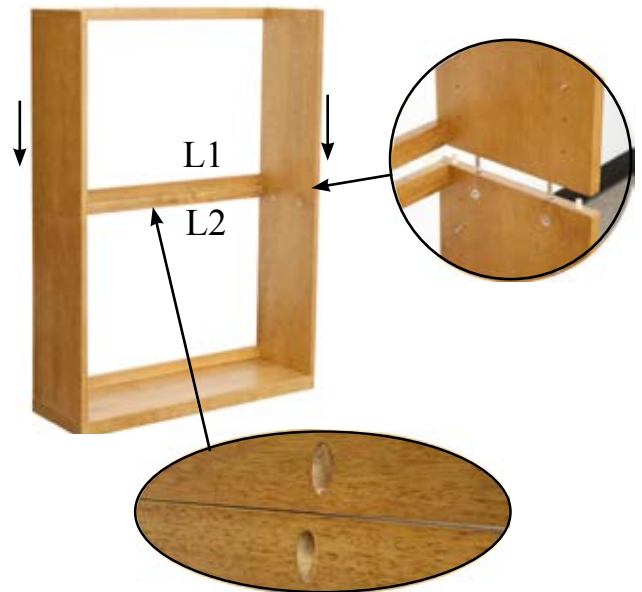


**NOTE:** Secure Runners(L1,L2) to one another with 6 Large Screws(D).

## BBC5236 - INSTRUCTIONS


You will need 2 person(s) for this assembly.

You will need a Phillips Head Screw Driver and a Rubber Mallet to Assemble.


**STEP 7 :** Insert 4 Cam Pins(A) & 4 Dowel Rods into Top(I).

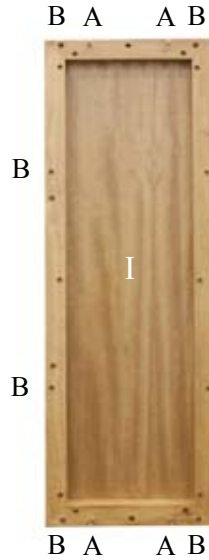

**STEP 8 :** Attach Top(I) by inserting Cam Pins(A) into Cam Locks(B). Lock Cams(see fig. 1)

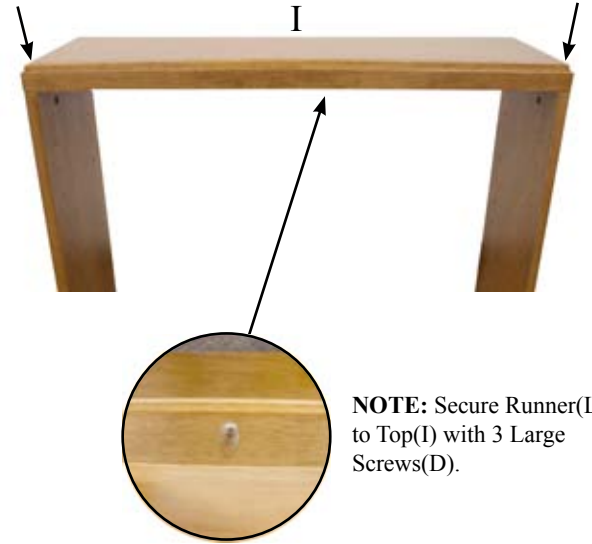

**STEP 9A :** Attach 2 Back Panels(H) with 28 Small Screws(E).

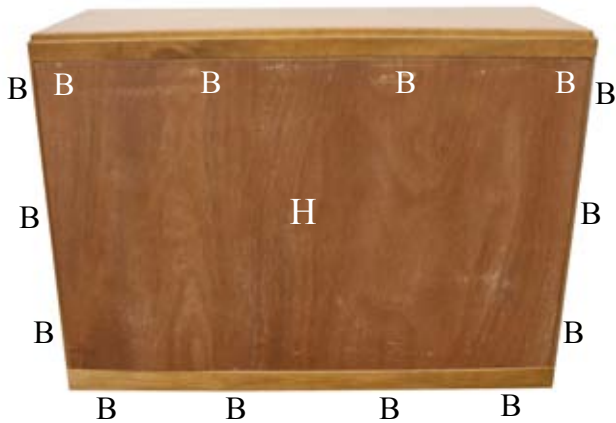

**STEP 9B :** Insert Shelf Pins(F) into both Sides (K1, K2) at desired heights. Place Shelves(M).

