

BBC7636 - INSTRUCTIONS

You will need 2 person(s) for this assembly.

You will need a **Phillips Head Screw Driver** and a **Rubber Mallet** to Assemble.

Hardware :

A:Cam Pins(28)• **B:**Cam Locks(28)• **C:**Dowel Rods(18)• **D:**Large Screws(12)• **E:**Small Screws(42)• **F:**Shelf Pins(24)

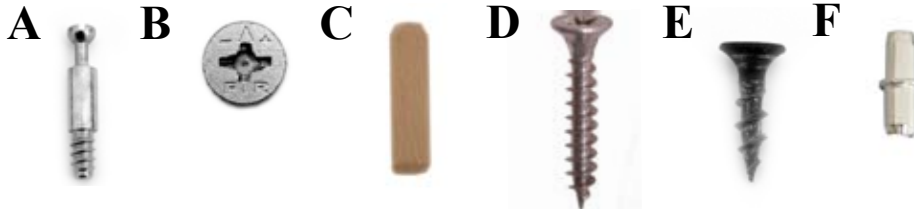



fig.1

-The arrow pointing toward the cam pin opening means the lock is opened.

-Turn clockwise to lock.

Parts :


H:Back Panel(3)• **I:**Top• **J:** Base• **K1:**Side A(3)• **K2:**Side B(3)• **L1:**Top Runner(3)• **L2:**Bottom Runner(3)• **M:**Shelf(6)

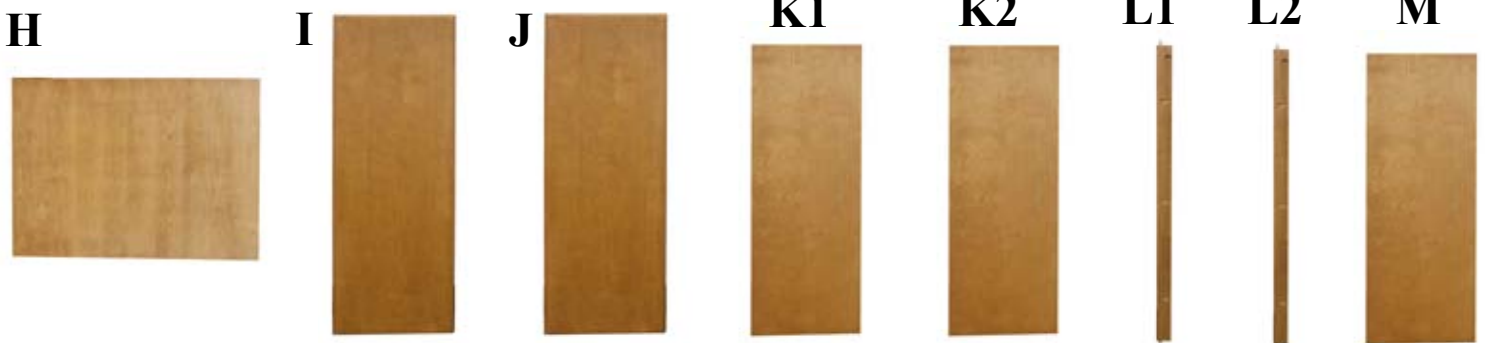

STEP 1 : Place 8 Cam Pins(A), 4 Cam Locks(B) and 4 Dowel Rods(C) into both Sides (K1, K2).



STEP 2 : Place 2 Cam Locks(B) into Top Runner(L1). Place 2 Cam Locks(B) & 2 Dowel Rods(C) into bottom Runner(L2).

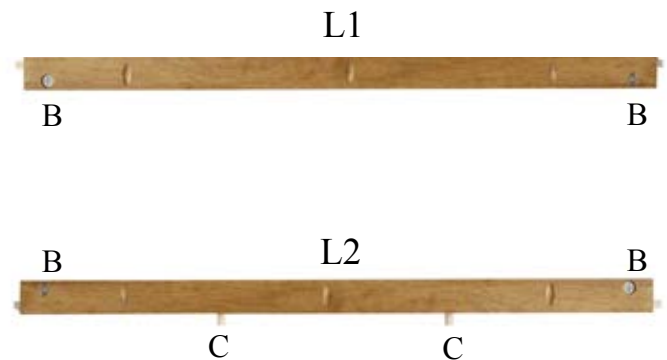

IMPORTANT NOTICE:


- Place all wooden parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
- Check to be sure that you have all parts and hardware.
- Remove all wrapping materials, including staples & packing straps before you start to assemble.
- Do not tighten all screws/bolts until completely assembled.
- Keep all hardware parts out of reach of children.

BBC7636 - INSTRUCTIONS

You will need 2 person(s) for this assembly.

You will need a Phillips Head Screw Driver and a Rubber Mallet to Assemble.

STEP 3 : Connect both Sides (K1, K2) with both Runners(L1,L2) by inserting Cam Pins into Cam Locks. Lock Cams(see fig. 1).

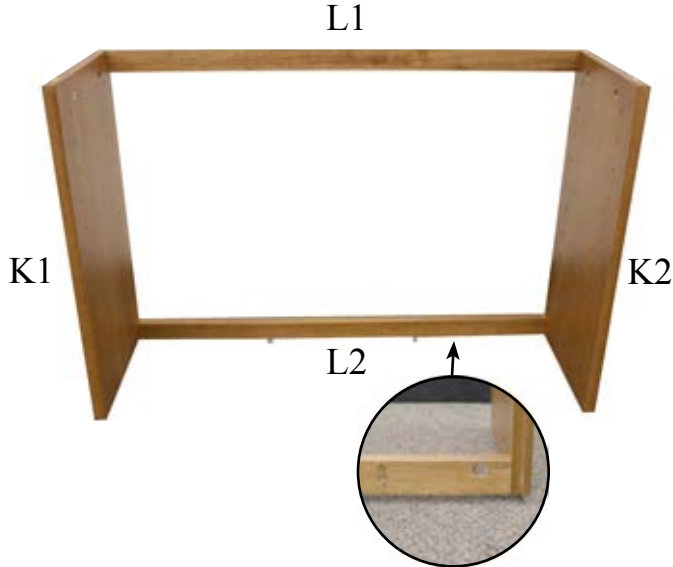

NOTE: Hardware on Runners(L1,L2) should face backside of bookcase.


STEP 4 : Insert 4 Cam Locks(B) into bottom side of Base(J).



STEP 6A : Repeat STEPS 1-3 twice.


STEP 6B : Stack second & third set of Sides & Runners to existing Sides & Runner Base by inserting Cam Pins into Cam Locks and Dowel Rods into coordinating positions. Lock Cams(see fig.1).

STEP 5 : Attach Sides & Runner to Base(J) by inserting Cam Pins into Cam Locks and Dowel Rods into coordinating positions.

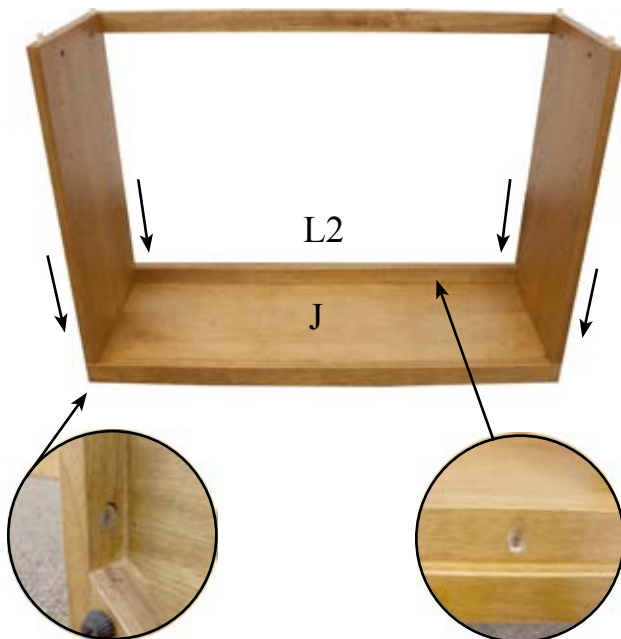

NOTE: Secure by locking cams(fig. 1) on bottom side of Base(J).

NOTE: Secure Runner(L2) to Base(J) with 3 Large Screws(D).

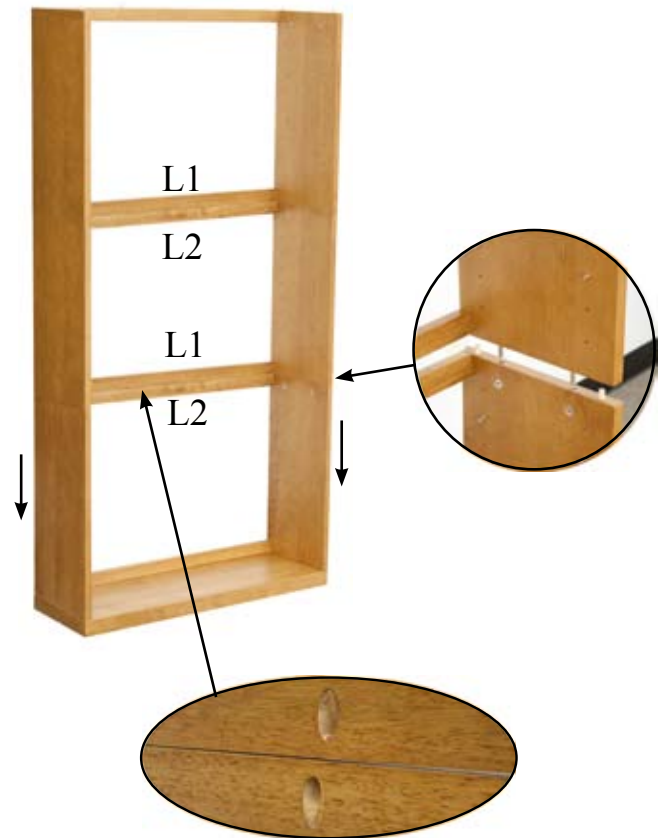


NOTE: Secure Runners(L1,L2) to one another with 6 Large Screws(D). Repeat for second set.

BBC7636 - INSTRUCTIONS


You will need 2 person(s) for this assembly.

You will need a Phillips Head Screw Driver and a Rubber Mallet to Assemble.

STEP 7 : Insert 4 Cam Pins(A) & 4 Dowel Rods into Top(I).

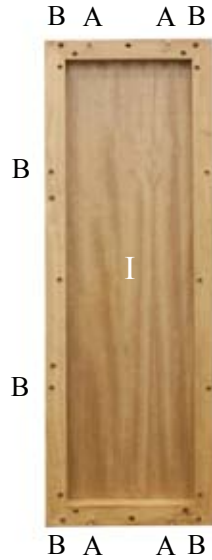


STEP 8 : Attach Top(I) by inserting Cam Pins(A) into Cam Locks(B). Lock Cams(see fig. 1)

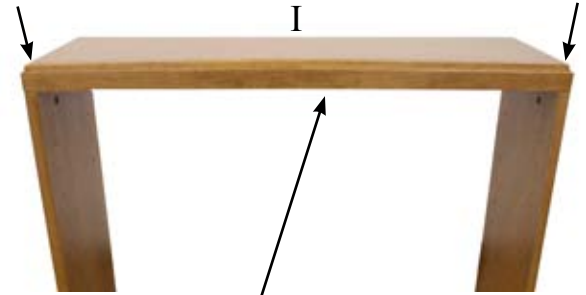

NOTE: Secure Runner(L1) to Top(I) with 3 Large Screws(D).

STEP 9A : Attach 3 Back Panels(H) with 42 Small Screws(E).

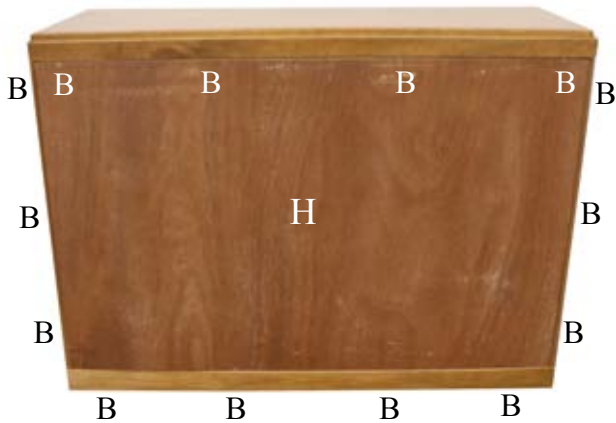

STEP 9B : Insert Shelf Pins(F) into both Sides (K1, K2) at desired heights. Place Shelves(M).

