


REGENCY

YOUR COMPLETE OFFICE SOLUTION

BBNCH2148-BBNCH2121 - INSTRUCTIONS

You will need a Phillips head screwdriver for this assembly.

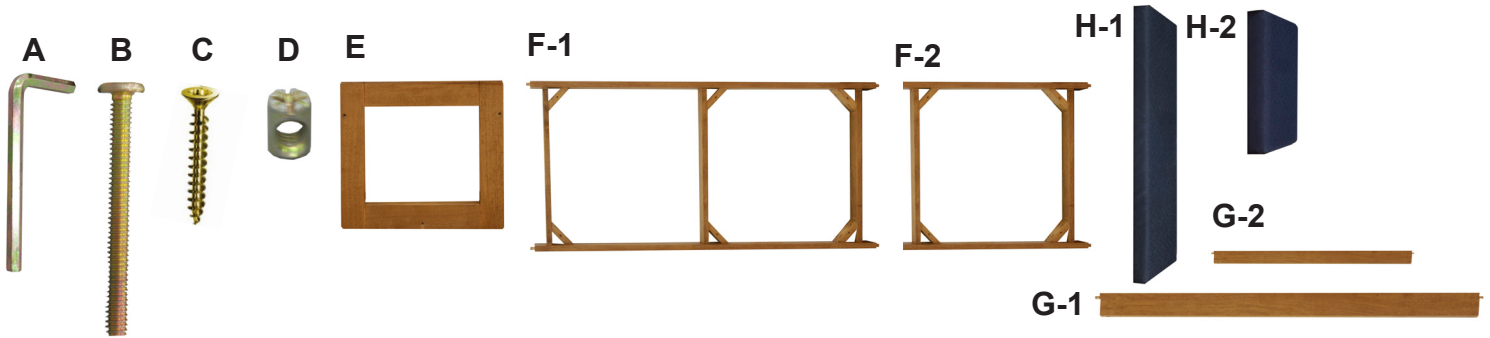

BBNCH2148

Organize your parts and hardware.


Hardware Components should include: **A)** 1 Allen Key
B) 6 Bolts **C)** 6 Wood Screws **D)** 6 Bolt Locks
E) 2 Sides **F-1)** 1 Frame **G)** 1 Runner **H-1)** 1 Cushion

BBNCH2121


Organize your parts and hardware.

Hardware Components should include: **A)** 1 Allen Key
B) 6 Bolts **C)** 4 Wood Screws **D)** 6 Bolt Locks
E) 2 Sides **F-2)** 1 Frame **G)** 1 Runner **H-2)** 1 Cushion

Step 1: Attach runner(G) to the sides(E). Insert 2 bolt locks(D) into (G) then screw in 2 bolts(B) through the legs into the bolt locks. **DO NOT TIGHTEN ALL THE WAY!**

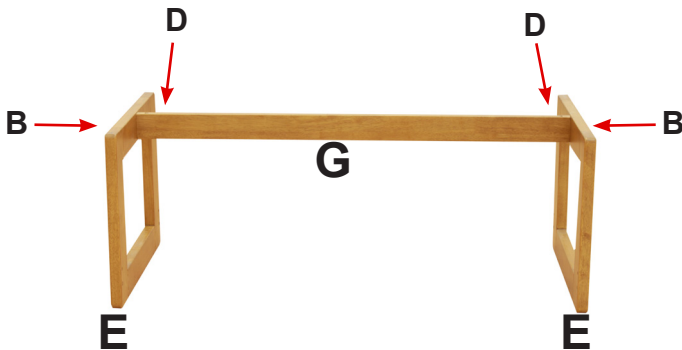

Step 2: Connect Frame(F1-F2) to the sides(E) opposite the runner. Flip unit so the frame is laying on the ground. Insert remaining 4 bolt locks(D) into the frame. Once inserted screw in 4 bolts(B) through legs into bolt locks and **TIGHTEN ALL BOLTS!**

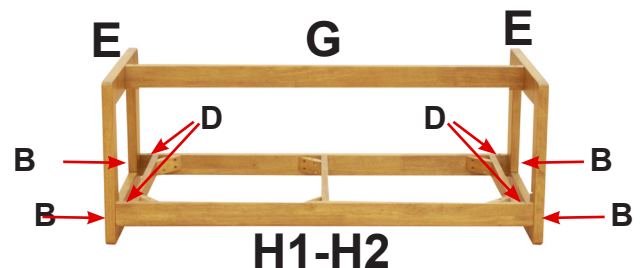

IMPORTANT NOTICE:

- Place all wooden parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
- Check to be sure that you have all parts and hardware.
- Remove all wrapping materials, including staples & packing straps before you start to assemble.
- Do not tighten all screws/bolts until completely assembled.
- Keep all hardware parts out of reach of children.
- **Check every 6 months for loose bolts; tighten as needed.**

Any problems or questions call Regency Office Furniture at 1-866-816-9822


REGENCY

YOUR COMPLETE OFFICE SOLUTION

BBNCH2148-BBNCH2121 - INSTRUCTIONS

You will need a Phillips head screwdriver for this assembly.

Step 3: Attach cushion(H-1,H-2) to frame with 4 wood screws(C). *If you have BBNCH2148 then you will need to use 2 more wood screws(C) in the center of the frame.*

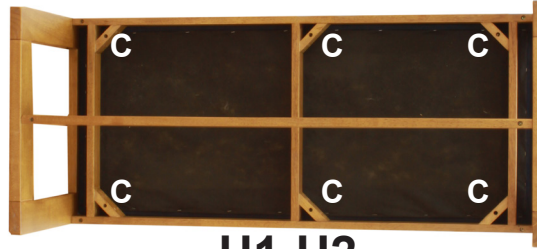

H1-H2

