


REGENCY

5-Shelf Bookcase • ONBK6330 • INSTRUCTIONS CARTONS: BC6330

Organize your parts and hardware. You will need (2) people, a Phillips head screwdriver and rubber mallet.

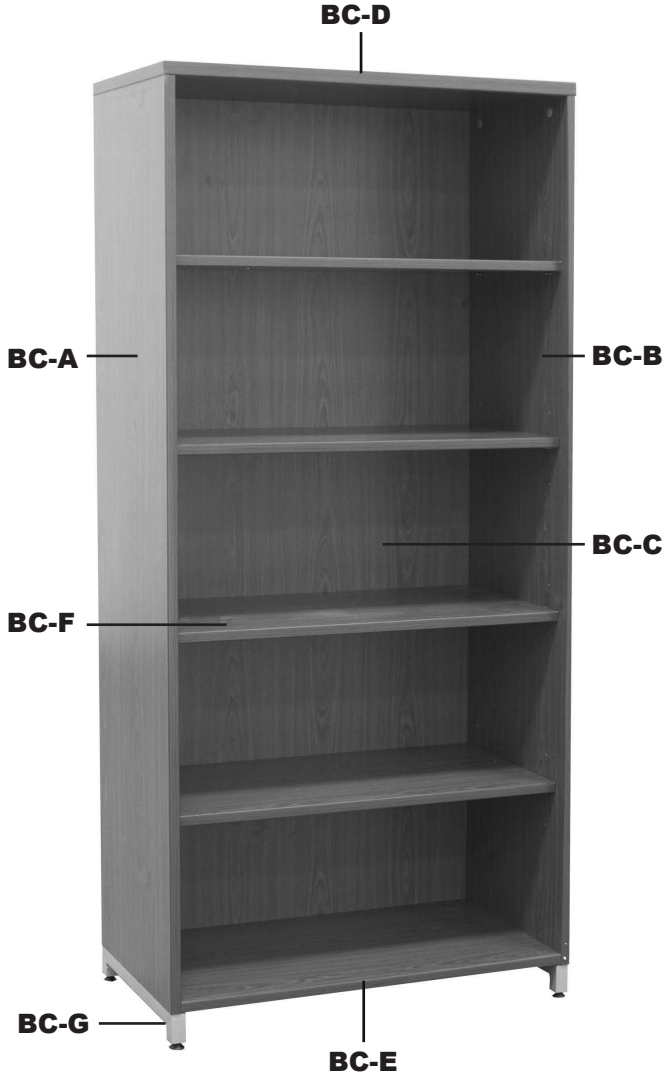

BC-A: Left Side
(60.5" x 15" x 1")



Quantity: 1

BC-B: Right Side
(60.5" x 15" x 1")



Quantity: 1

BC-C: Back Panel
(60.5" x 28" x 1")



Quantity: 1

BC-D: Top
(1" x 29.5" x 15")



Quantity: 1

BC-E: Bottom
(1" x 28" x 14")



Quantity: 1

BC-F: Shelves
(1" x 28" x 13")



Quantity: 4

BC-G: Foot Brackets
(15"D)




Quantity: 2

Figure 1:

Cam Lock Assembly:

To open Cam, point arrow toward Cam Pin hole. To lock Cam, turn clockwise.

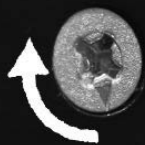

IMPORTANT NOTICE:

Place all wooden parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
Check to be sure that you have all parts and hardware.
Remove all wrapping materials, including staples & packing straps before you start to assemble.
Do not tighten all screws/bolts until completely assembled.
Keep all hardware parts out of reach of children.

REGENCY

5-Shelf Bookcase • ONBK6330 • INSTRUCTIONS CARTONS: BC6330

Hardware :

H: Allen Key



Quantity: 1

I: 1.5" Long Bolts
(38mm)



Quantity: 4

J: Wood Cam Pins



Quantity: 16

K: Shelf Pins



Quantity: 16

L: 3/4" Wood Screws
(19mm)



Quantity: 6

M: Glides



Quantity: 4

N: Cam Caps



Quantity: 16

O: Washers




Quantity: 6

STEP 1 : Insert one Wood Cam Pin(J) into Back Panel(BC-C).



STEP 2 : Attach Bottom(BC-E) to the Back Panel(BC-C) and tighten cam lock (Figure 1).


Note: Cam Locks on Bottom should face down away from back.

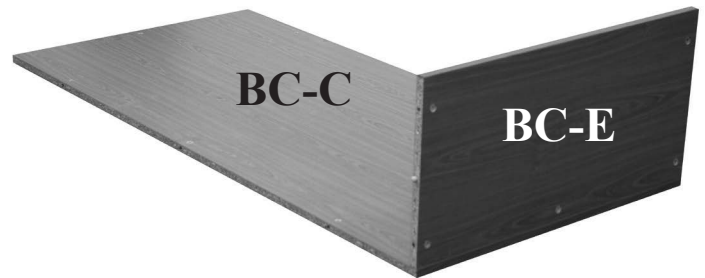


REGENCY

5-Shelf Bookcase • ONBK6330 • INSTRUCTIONS CARTONS: BC6330


STEP 3 : Insert 5 Wood Cam Pins(J) into the Left Side(BC-A) and Right Side(BC-B).

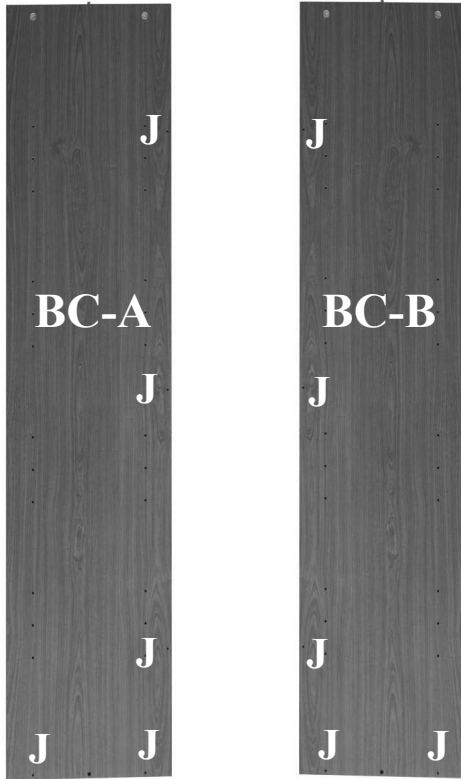


STEP 4 : Attach the Left Side(BC-A) and Right Side(BC-B) to the Back Panel(BC-C) and Bottom(BC-E) by inserting and locking cams (Figure 1).

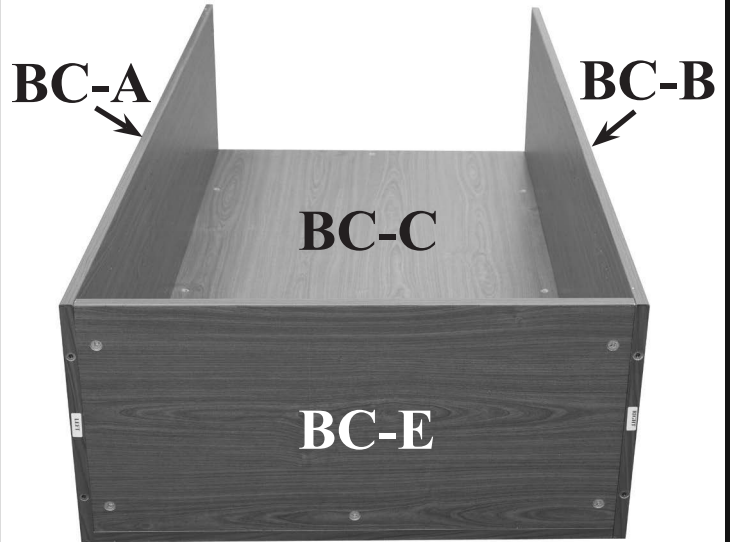

STEP 5 : Insert 5 Wood Cam Pins(J) into Top(BC-D).

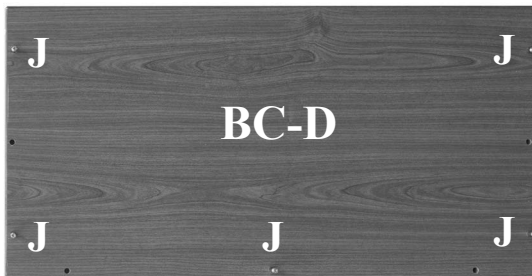


STEP 6 : Attach Top(BC-D) to Left Side(BC-A), Right Side(BC-B) and Back Panel(BC-C) by inserting and locking cams (Figure 1).

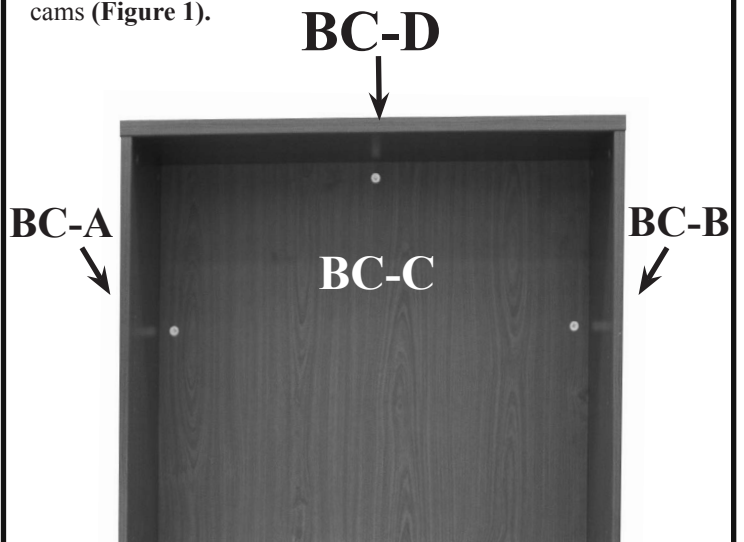

REGENCY

5-Shelf Bookcase • ONBK6330 • INSTRUCTIONS CARTONS: BC6330

STEP 7 : Attach each **Foot Bracket(BC-G)** by placing **3 Washers(O)** between the **Bottom(BC-E)** and wood screw holes on Foot Bracket. Then attach each Foot Bracket using **2 Long Bolts(I)** and **3 Wood Screws(L)**. Once in place, insert **4 Glides(M)** into Foot Brackets.

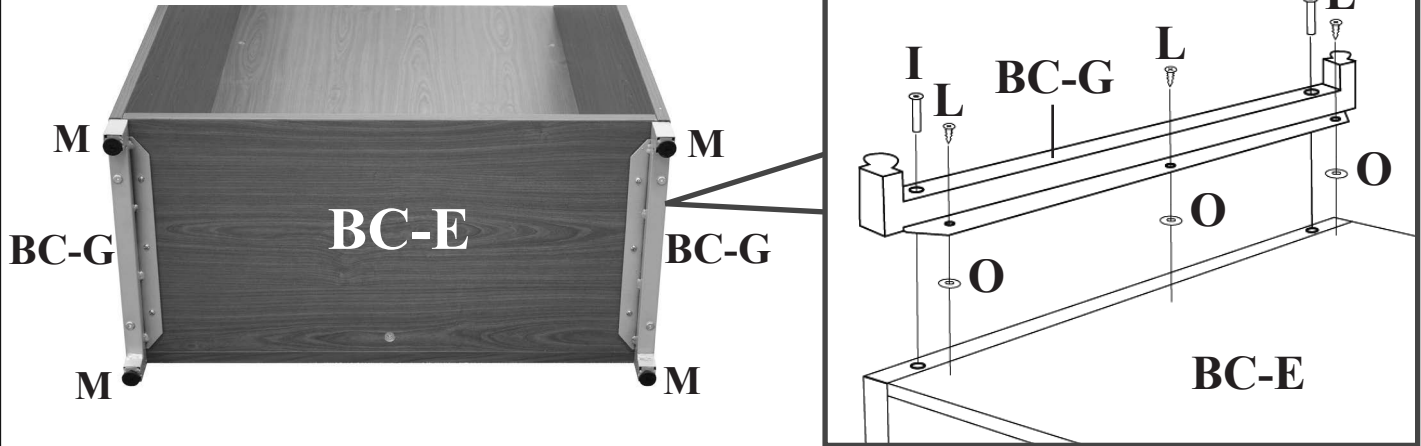

STEP 8 : Insert **16 Shelf Pins(K)** into the **Left Side(A)** and **Right Side(B)** at the locations of your choice. Place **4 Shelves(BC-F)**.

STEP 9 : To finish installation, place **Cam Caps(N)** over cam locks.