

TVED7236 - INSTRUCTIONS

You will need a Phillips Head screwdriver for this assembly. Always work on a clean, dry and non-scratching surface. This assembly will take 2 people(s)

Organize your hardware: **A)** plastic Grommet (1) **B)** feet (12) **C)** cam pins (11) **D)** cam locks (11) **E)** dowel rods (10) **G)** long screws (12) **H)** washers (12)




Figure 1: To open Cam, point arrow toward Cam Pin hole. To lock Cam, turn clockwise.




Organize your parts: **K)** Credenza Modesty **L)** Side Panels (2) **M)** Credenza Top **N)** Pedestals (2) **O)** Center Drawer



STEP 1 : Place 2 cam pins (C), 2 dowel rods (E), 2 cam locks (D) and 2 feet (B) into each credenza side (L). Also Place 7 cam locks (D) onto credenza modesty (K). Connect the sides (L) to modesty (K) by inserting cam pins into locks of modesty and tightening.

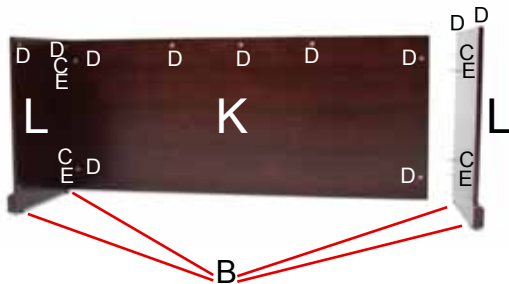

STEP 2 : Place 7 cam pins (C) and 6 dowel rods (E) into credenza top (M) and connect top to sides by inserting pins into locks and tightening.

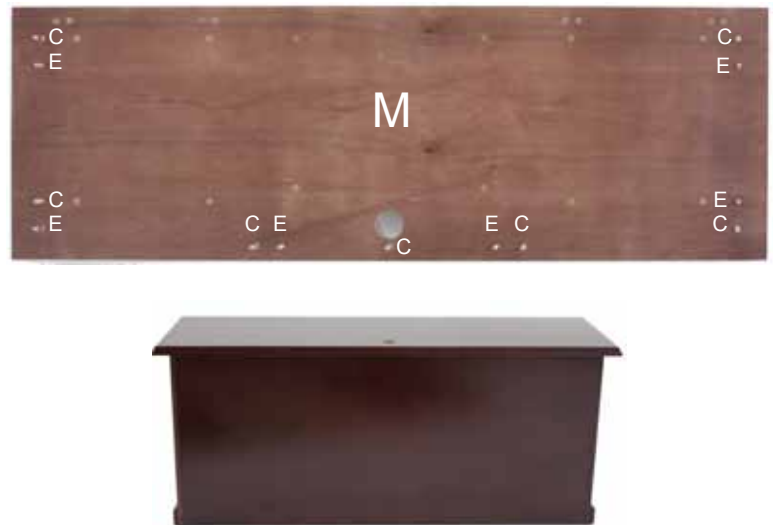

IMPORTANT NOTICE:

- Place all wooden parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
- Check to be sure that you have all parts and hardware.
- Remove all wrapping materials, including staples & packing straps before you start to assemble.
- Do not tighten all screws/bolts until completely assembled.
- Keep all hardware parts out of reach of children.

TVED7236 - INSTRUCTIONS

You will need a Phillips Head screwdriver for this assembly. Always work on a clean, dry and non-scratching surface. This assembly will take 2 people(s)

STEP 3 : Screw 4 feet (B) onto each pedestal and remove the drawers (figure 2). Use 4 long bolts and 4 washers (G/H) to connect each pedestal (N) to underside of credenza. Repeat this step with the second pedestal.



STEP 8 : Attach center drawer (O) to underside of credenza with 4 long bolts and washers (G/H) each.



FIGURE 2: TO TAKE OUT DRAWERS : PULL OUT FULLY AND LIFT ONE TRIGGER UP AND PRESS OPPOSITE TRIGGER DOWN AND PULL.



IMPORTANT NOTICE:

- Place all wooden parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
- Check to be sure that you have all parts and hardware.
- Remove all wrapping materials, including staples & packing straps before you start to assemble.
- Do not tighten all screws/bolts until completely assembled.
- Keep all hardware parts out of reach of children.

Any problems or questions call Regency Office Furniture at 1-866-816-9822