


# REGENCY

## 42" Bridge • SBR4224 • INSTRUCTIONS


Organize your parts and hardware. You may need a rubber mallet.

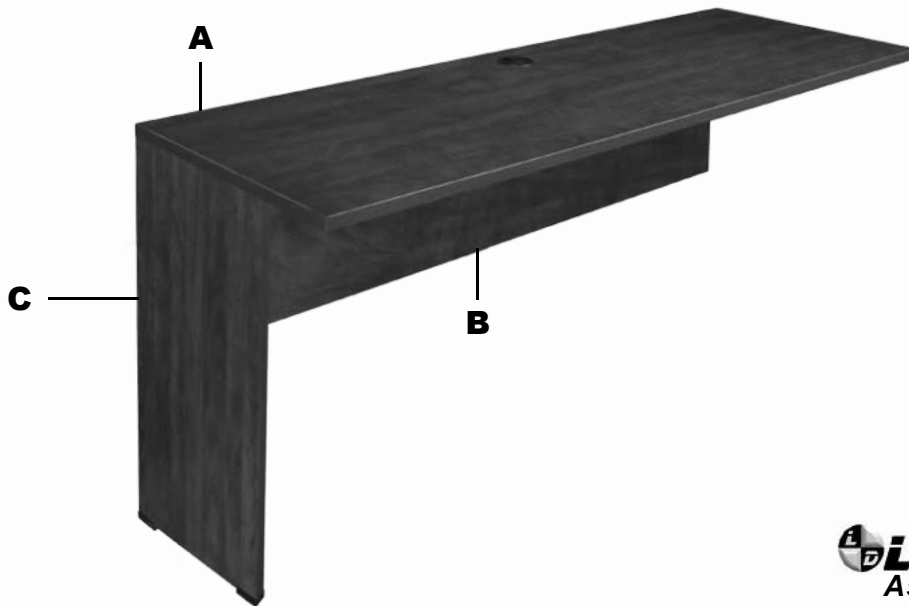

**LOCKDOWEL™**  
Assembly is a snap!

### Parts :

**A: Bridge Top**  
(42" x 24" x 1")

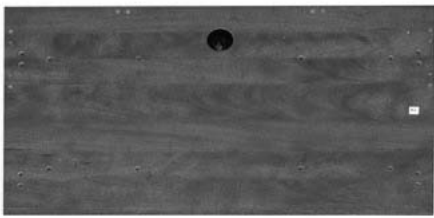

Quantity: 1

**B: Modesty**  
(41" x 17" x .75")



Quantity: 1

**C: Leg**  
(12" x 27.5" x 1")



Quantity: 1

### Hardware :

**D: Flat Bracket**



Quantity: 4

**E: Thumb Screw**



Quantity: 16

**NOTE : PRODUCT IS REVERSIBLE.**  
**SOME STEPS INCLUDE BOTH RIGHT AND LEFT ORIENTATIONS.**  
Choose orientation before assembly.

### IMPORTANT NOTICE:

Place all wooden parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.  
Check to be sure that you have all parts.  
Remove all wrapping materials, including staples & packing straps before you start to assemble.  
Keep all hardware parts out of reach of children.

Any problems or questions call Regency Office Furniture at 1-866-816-9822

# REGENCY

## 42" Bridge • SBR4224 • INSTRUCTIONS

Organize your parts and hardware. You may need a rubber mallet.

**STEP 1 :** Start by attaching **Modesty(B)** to **Leg(C)** by inserting pins and lockdowels into coordinating holes(*see figure 1*).


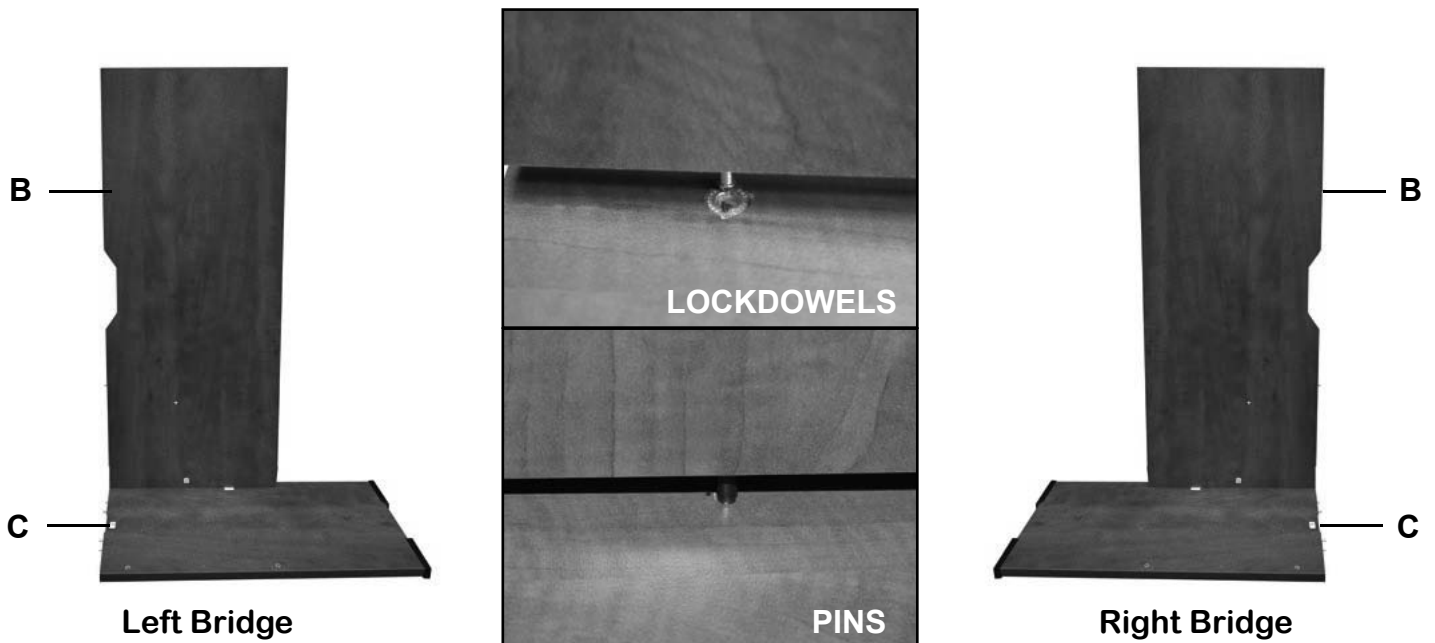


Figure 1

**STEP 2 :** Attach **Bridge top(A)** to **Modesty(B)** and **Legs(C)** by inserting pins and lockdowels into coordinating holes.

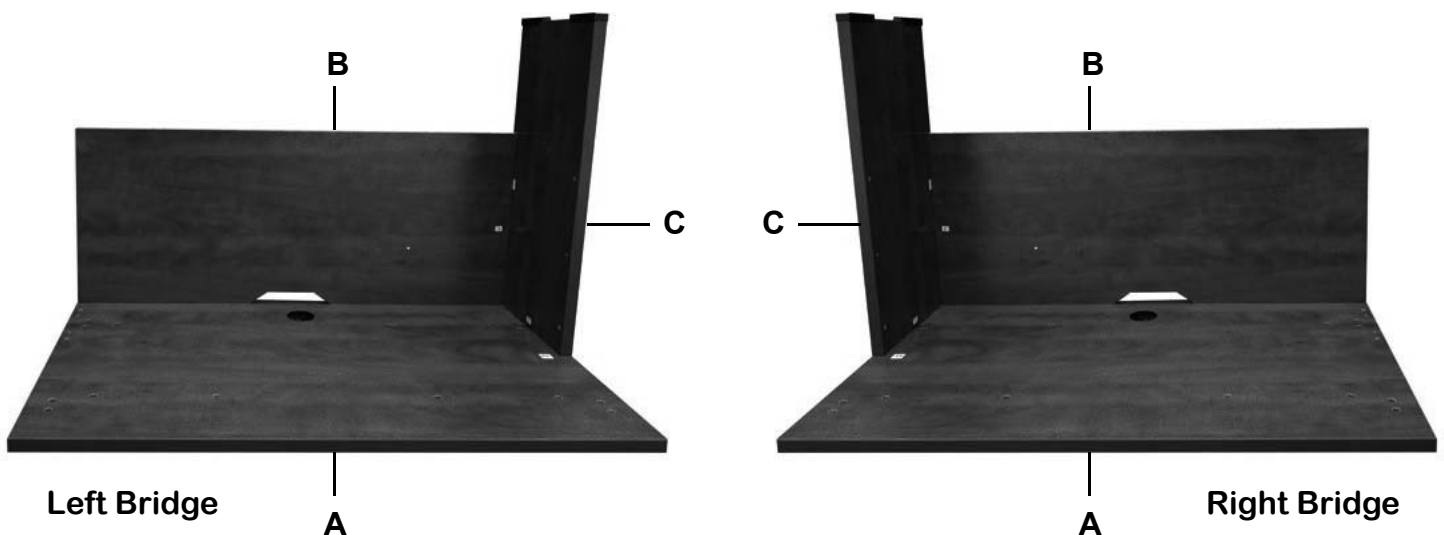

# REGENCY

## 42" Bridge • SBR4224 • INSTRUCTIONS

Organize your parts and hardware. You may need a rubber mallet.

**STEP 3 :** Attach the Bridge to the Desk using 2 Flat Brackets(D) and 8 Thumb Screws(E). See figure 2.

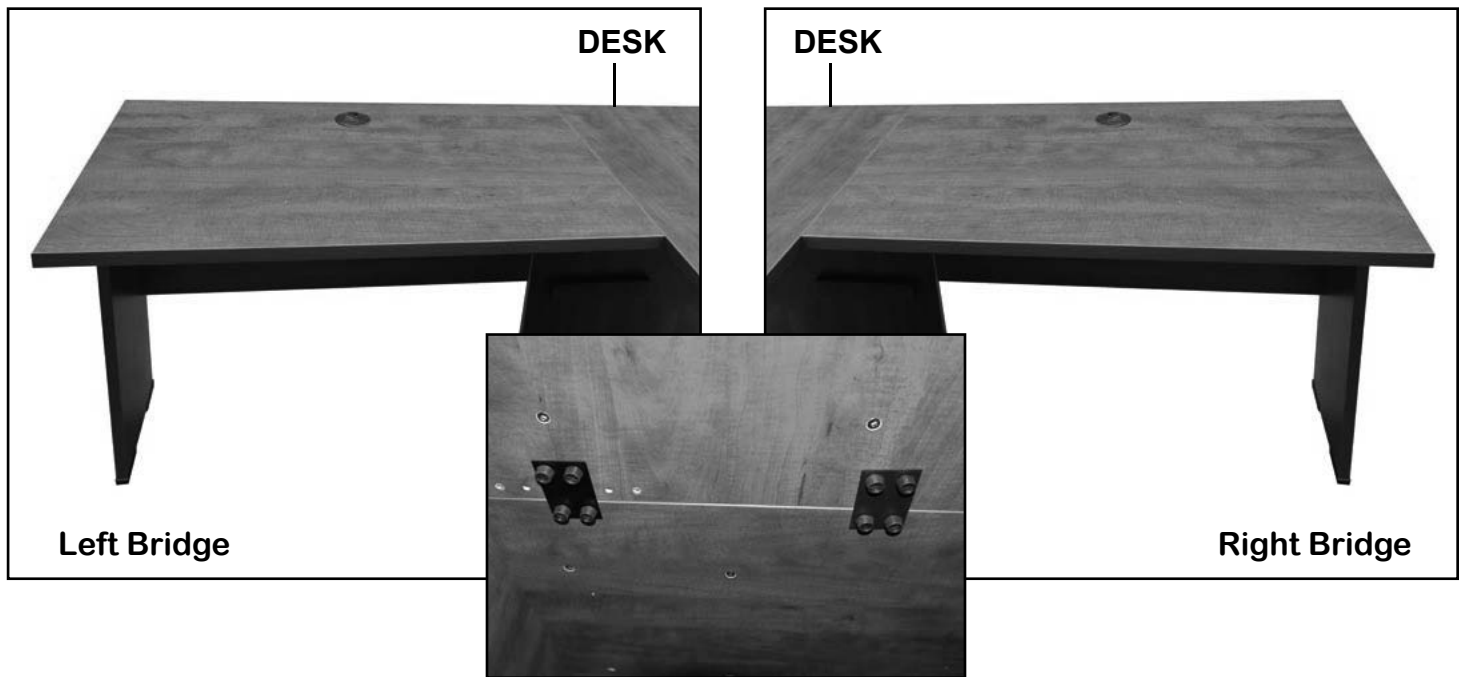


Figure 2

**STEP 4 :** Attach Credenza to the Bridge using 2 Flat Brackets(D) and 8 Thumb Screws(E).

*Note: The Leg on the Bridge includes a cutout for this step (see figure 3).*

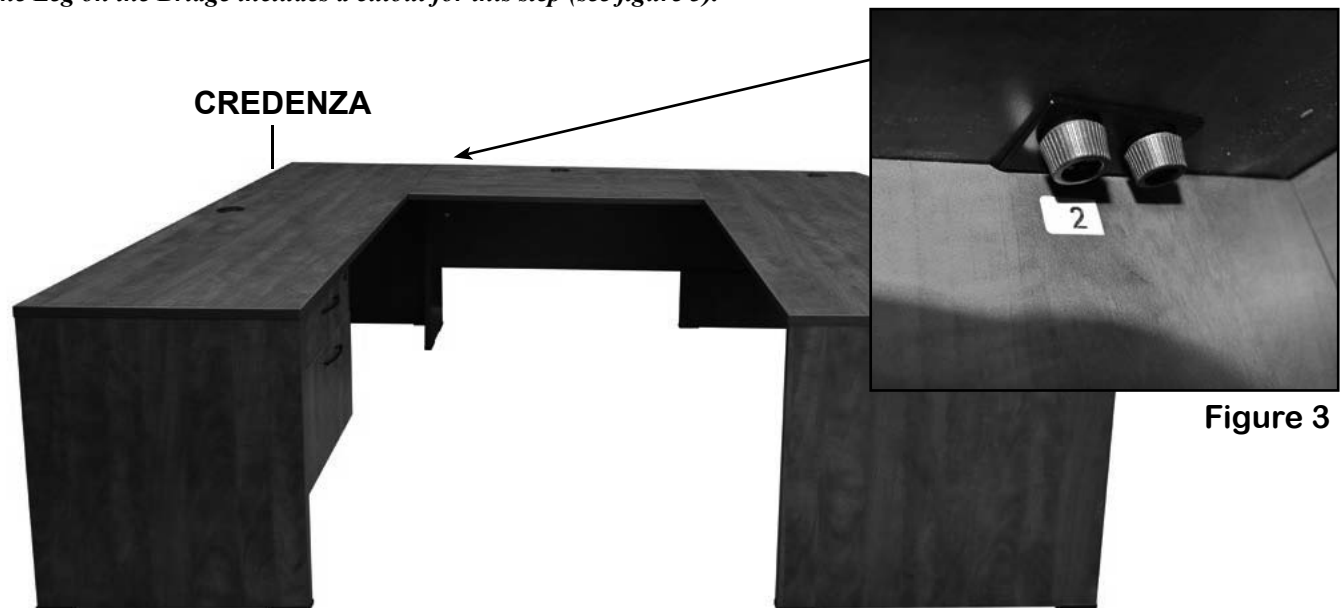


Figure 3