


REGENCY

Credenza Shell • SDS7124 • INSTRUCTIONS


Organize your parts. You may need a rubber mallet.

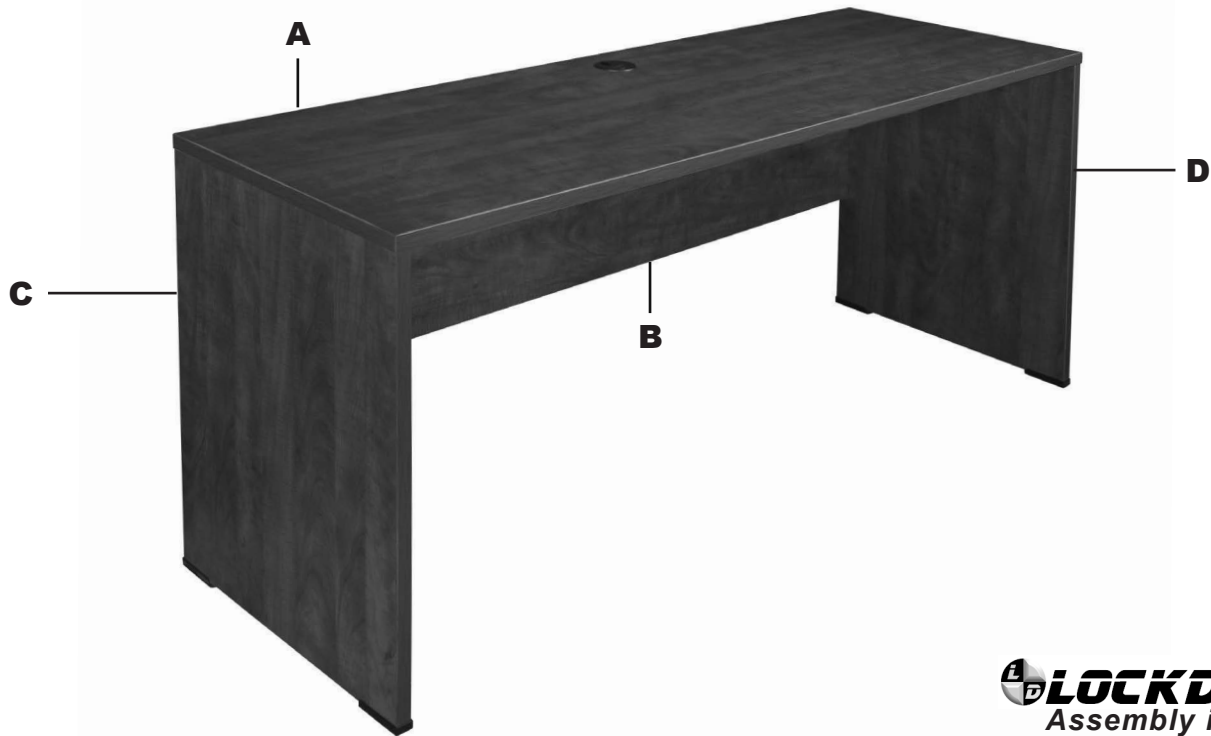

LOCKDOWEL™
Assembly is a snap!

Parts :

A: Credenza Top
(71" x 24" x 1")

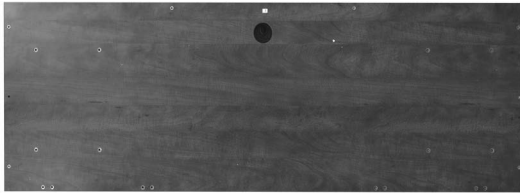


Quantity: 1

B: Modesty
(69" x 17" x .75")




Quantity: 1

C: Left Leg
(24" x 27.5" x 1")

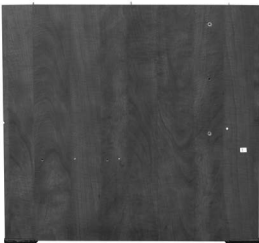

Quantity: 1

D: Right Leg
(24" x 27.5" x 1")

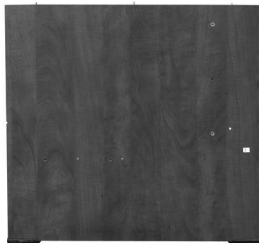

Quantity: 1

IMPORTANT NOTICE:


Place all wooden parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
Check to be sure that you have all parts.
Remove all wrapping materials, including staples & packing straps before you start to assemble.
Keep all hardware parts out of reach of children.

REGENCY


Credenza Shell • SDS7124 • INSTRUCTIONS

Organize your parts. You may need a rubber mallet.

STEP 1 : Start by attaching **Modesty(B)** to **Left Leg(C)** at **Location 1**(see *figure 1*) by inserting pins and lockdowels into coordinating holes(see *figure 2*).

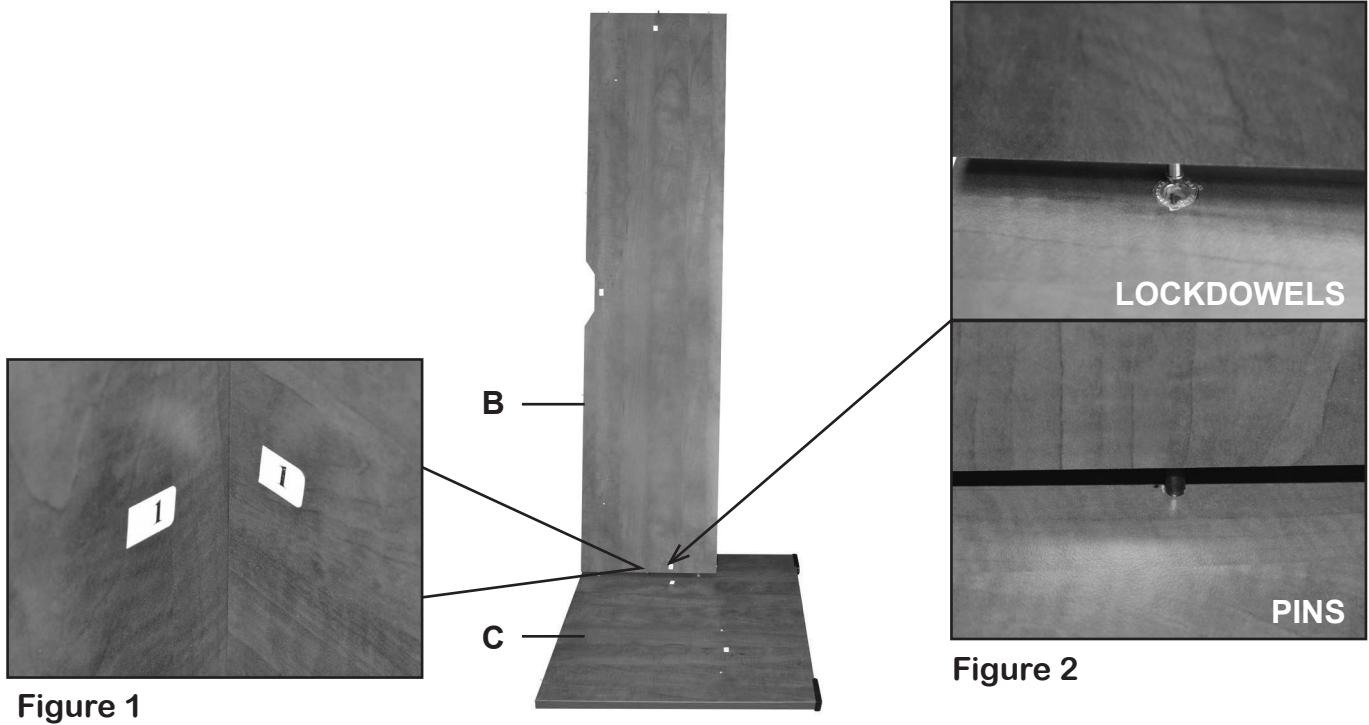

STEP 2 : Attach **Right Leg(D)** to **Modesty(B)** at **Location 2** by inserting pins and lockdowels into coordinating holes.

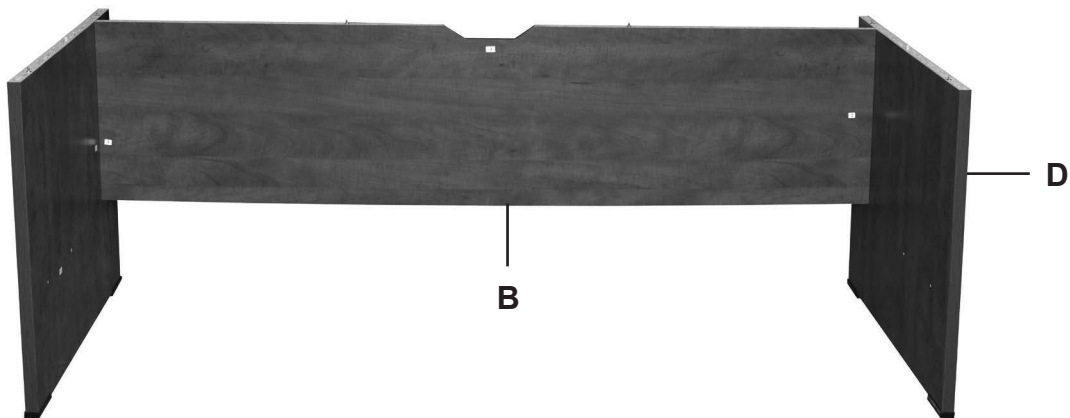

REGENCY

Credenza Shell • SDS7124 • INSTRUCTIONS

Organize your parts. You may need a rubber mallet.

STEP 3 : Attach Credenza top(A) to Modesty(B) and both Left and Right Legs(C,D) at Location 3 by inserting pins and lockdowels into coordinating holes.

